



Silicon Motion, Inc.

DYNA-SM32X

USB2.0 flash media controller

Security Application Software User Manual

Ver : 1.0

Step 1: Run Installer


Run “USB MEMORY BAR.EXE”

After Installation, “memorybar.exe” icon will appear on desktop



Step 2: Partition Disk

Click memorybar.exe icon to enter main program

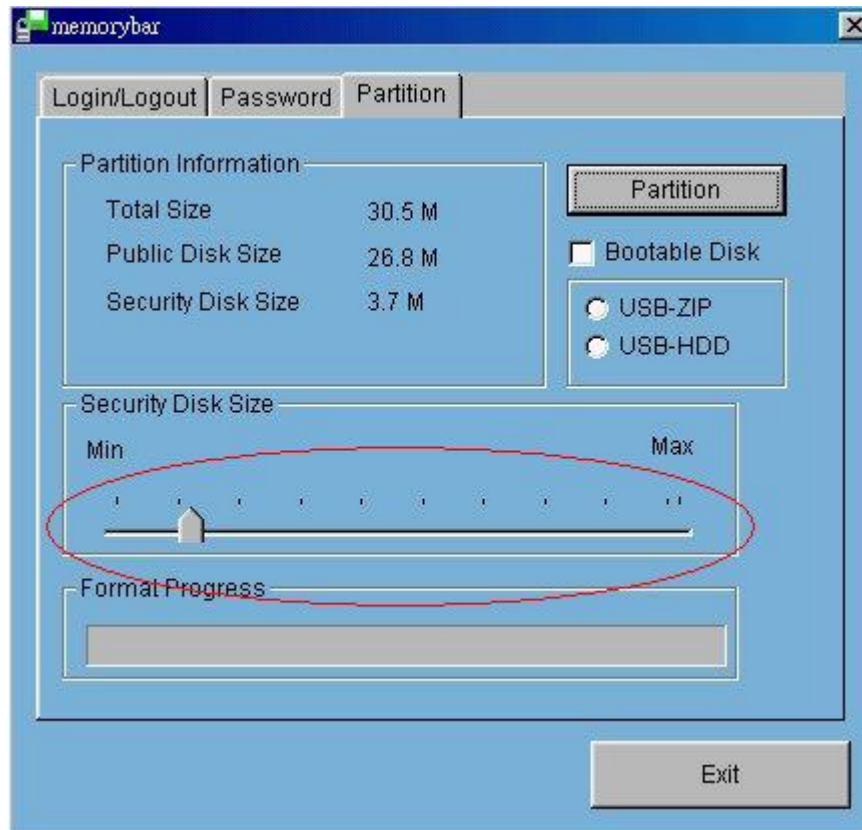

Adjust the Slider Control Bar to partition “security size” and “public size”


Then press “Partition” button. The application will partition the UFD into 2 zones.

The default password is “0000”

Warning: Run Partition will erase all data on the disk

If security zone is not needed, user can skip the steps.


Step 3: Change Password

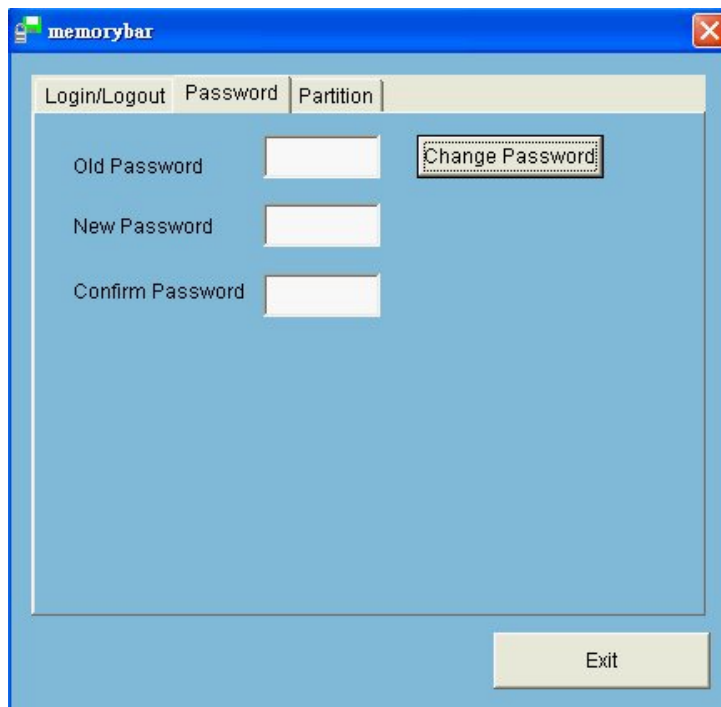

User can change their own password


Maximum password is 12 Character

Step 4 Login

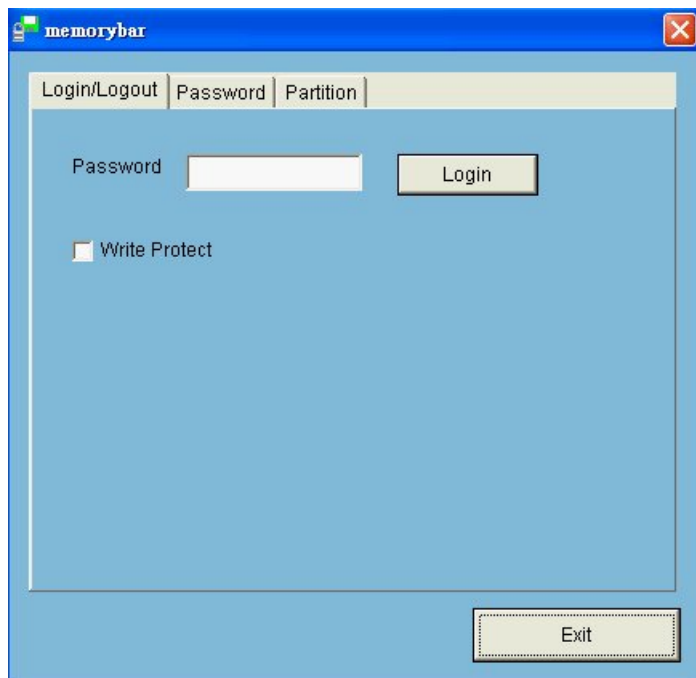


To access Secured Zone, enter the password, then press “Login”.

Step 5: Logout

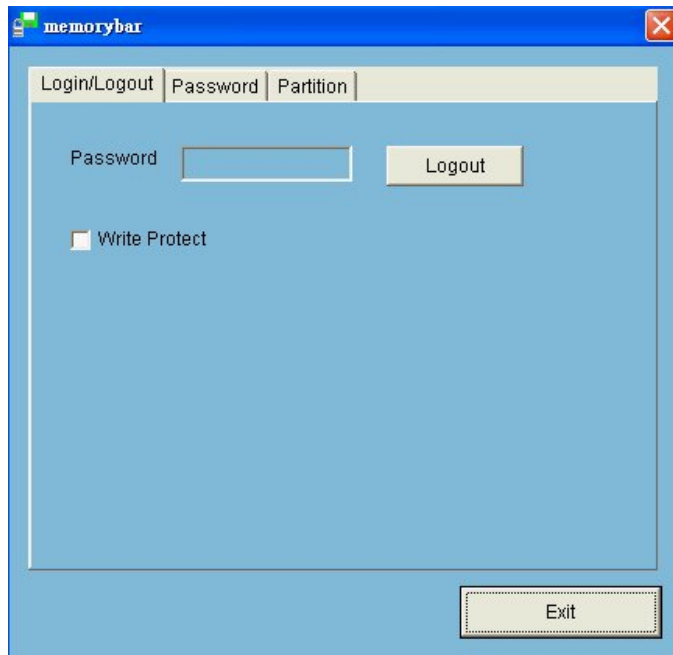

Click “Logout” to return to public zone, or simply unplug/plug the UFD.

Bootable function

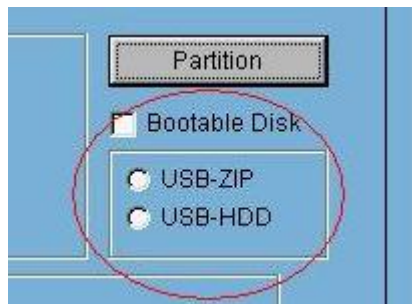

Note: only Win98 and WinME can Create Bootable disk

If select “USB-ZIP”, BIOS need set boot type to USB-ZIP, and when PC boot will display A:\>

If select “USB-HDD”, BIOS need set boot type to USB-HDD, and when PC boot will display C:\>

Write Protect function



User can dynamic change “Software write protect “ by the check box

Icon prompt

When disk is in Public Zone, it will display “Green Disk Icon”

When disk is in Secured Zone, it will display “Red Disk Icon”

